
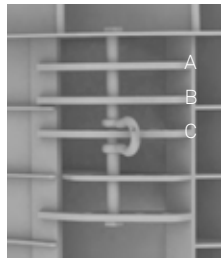


### Injector Door Ltd.

Eystein Elttør  
 Tel.: +298 28 06 06  
 Mail: ee@injector-door.eu  
 Web: www.injector-door.eu

 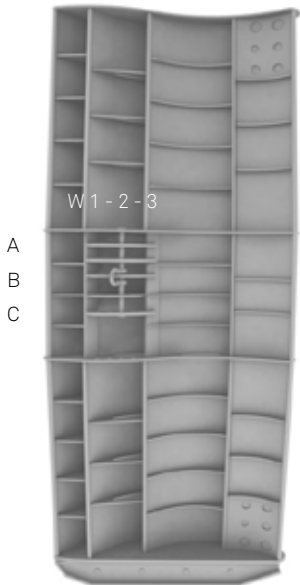


W: Main wire connection  
 C-D: Upper backstop connection  
 E-F-G: Lower backstop connection

To increase spread (AOA): Connect to a higher no. in point W  
 To decrease spread (AOA): Connect to a lower no. in point W


Tilt door inwards: C and E or F on back & A on front  
 Tilt door outwards: D and F or G on back & C on front

Tilt door forward: Upper back stop to a higher no. in point C or D  
 Tilt door backwards: Lower back stop to a higher no. In point E or F or G




### SUGGESTED STARTING POINT: NEUTRAL SETTING

 W 2B: Main wire connection  
 C 3: Upper back stop connection  
 F 3: Lower back stop connection



### TILT DOOR FORWARD SETTING

 W 2B: Main wire connection  
 C 3: Upper back stop connection  
 G 4: Lower back stop connection



### TILT DOOR BACKWARD SETTING

W 2B: Main wire connection  
 C 4: Upper back stop connection  
 F 3: Lower back stop connection