

**Injector Door Ltd.**  
 Eystein Elttør  
 Tel.: +298 28 06 06  
 Mail: ee@injector-door.eu  
 Web: www.injector-door.eu



W: Main wire connection  
 a-b-c: Towing point on wire side  
 B: Middle chain connection on back  
 C: Upper & lower chain connection on back



Increase spread (AOA): Connect to a higher no. in point W and/or in point B  
 Decrease spread (AOA): Connect to a lower no. in point W and/or in point B

Tilt door inwards: If the doors tend to fall on back, the lower chain should be shorten in point C  
 Tilt door outwards: If the doors tends to fall on wire side, the upper chain should be shorten in point C

**IMPORTANT – DO IT LINK BY LINK**


Tilt door outwards: If the doors tilt inwards in shallow waters fishing, put shackle in towing point c

Chain lengths: Chain lengths are from attachment point on door (including shackle) to the connection ring

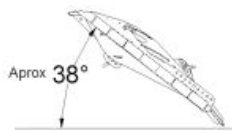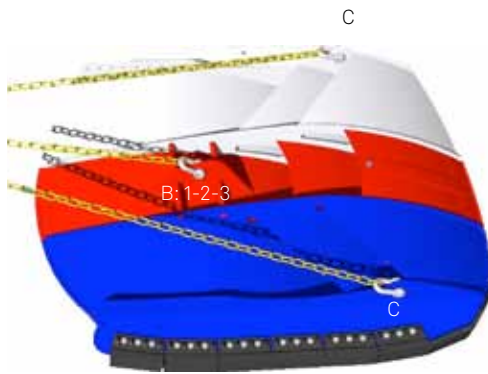


**SUGGESTED STARTING POINT:  
 MEDIUM AOA SETTINGS**

W 2b: Main wire connection  
 B 2: Middle chain connection  
 C: Upper and Lower chain connection

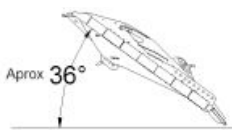

**DECREASE AOA: MINIMUM AOA SETTINGS**

W 1b: Main wire connection  
 B 1: Middle chain connection  
 C: Upper and Lower chain connection

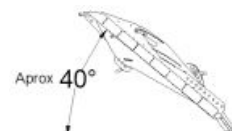

**INCREASE AOA: MAXIMUM AOA SETTINGS**

W 3b: Main wire connection  
 B 3: Middle chain connection  
 C: Upper and Lower chain connection